

TECHNICAL DATA SHEET

STEP STOOL

EPDA

NT 064 - V01 – October 2016



 **FORTAL**[®]
www.fortal.fr

 Made in France

1. INTRODUCTION

This step stool is designed to serve a work height between 2435 and 2885mm.
Use example: tasks at low height, shelving access, cabinet or setting people at the right height at a work station.

The step stool is equipped with:

- Anti-slip pads ;
- Anti-skid steps, depth 80mm, strengthened by a bar of 25 x 25 mm.

2. COMPLIANCE

This technical data sheet certifies the values mentioned herein are correct as well as in compliance with the requirements of safety decree 96-333.

3. REPRESENTATION





Maximum working load: 150 Kg
Platform dimensions =
240x270 mm

Reference	Description	Overall width (mm)
F050250002	Step stool EPDA 2 steps	396
F050250003	Step stool EPDA 3 steps	433
F050250004	Step stool EPDA 4 steps	468

4. THE RANGE AND TECHNICAL CHARACTERISTICS

Reference	Number of steps	Platform height h (mm)	Working height (mm)	Base dimensions AxB (mm)	Overall height H (mm)	Angle A	Weight (kg)
F050250002	2	435	2435	792x396	450	60°	4.5
F050250003	3	665	2665	1058x433	680		5.5
F050250004	4	885	2885	1312x468	900		7

2 to 4 steps models:

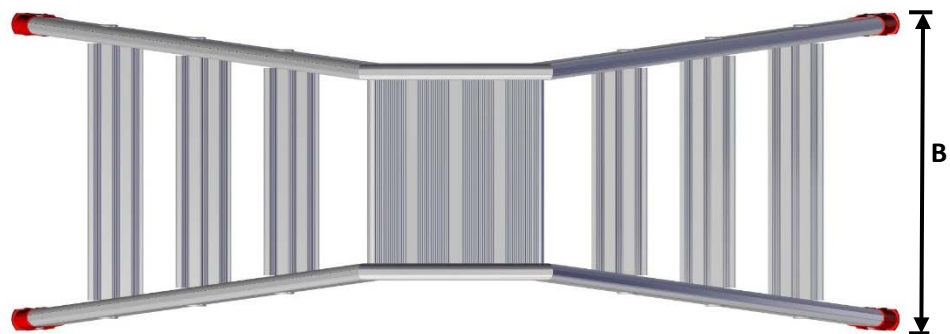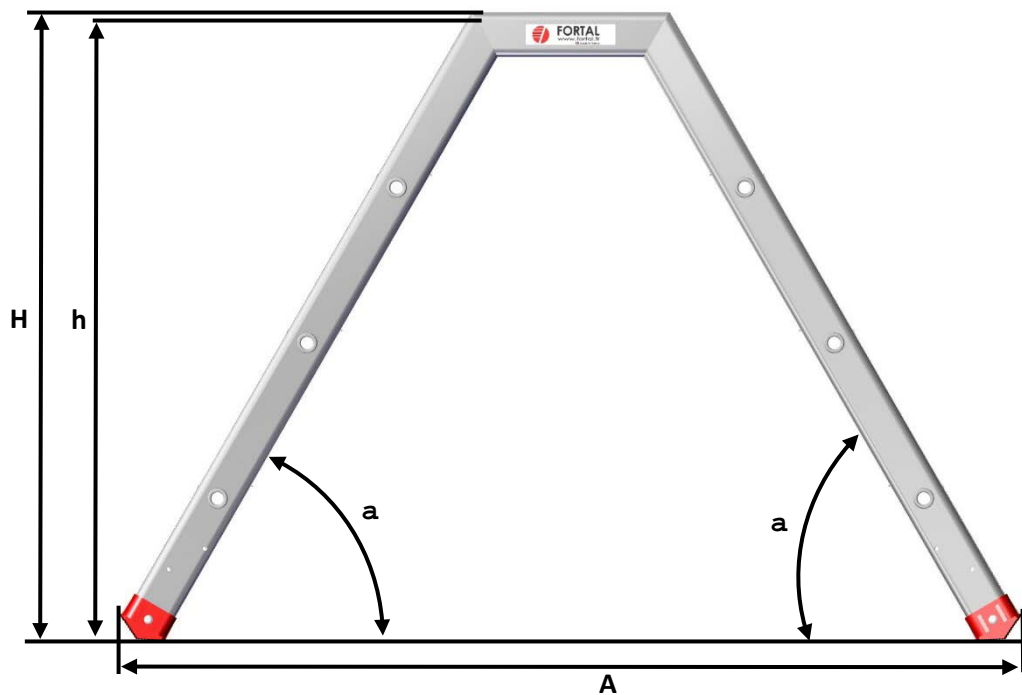

5. PICTURES

2 steps model



4 steps model




3 steps model



6. COMPONENT LIST

Description	Nr.	Reference
Anti-Slip pads 65x25	1	A750011015
Self-tapping screw Zn 4.8x16	2	A710100016

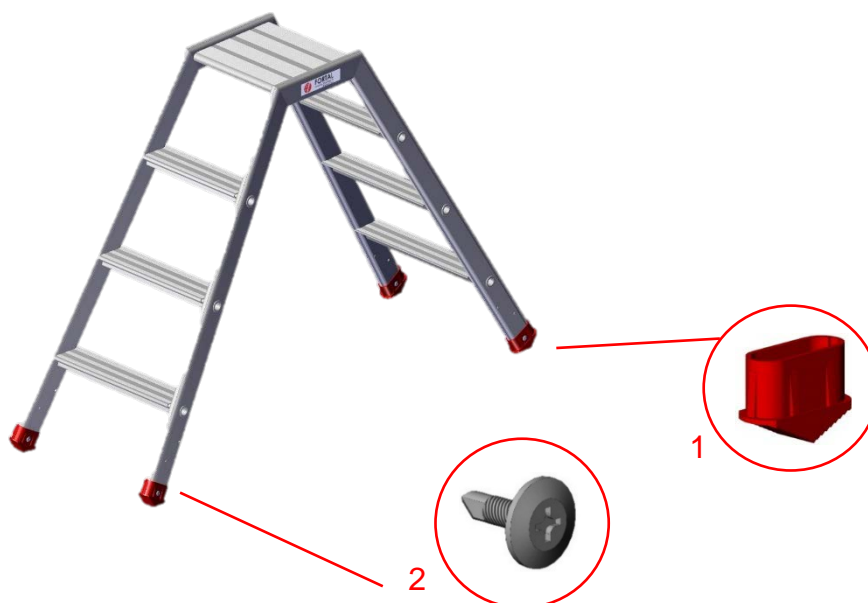

7. OPTIONS

F050030070 : retractable swivel wheels



F030050015 : side safety rail



8. SAFETY TIPS

Maximum working load: 1 person 150 kg

Before each use of the EPDA step stool, verify by visual inspection the following:

- Good working of the step stool and its accessories
- Wear or lack thereof pads
- Possible presence of deformations of the elements
- Condition of welds
- Presence of the product identification label (attached to one of the profile)
- For replacement of some elements, use only original FORTAL elements

Tips for optimal use:

- Surfaces of use must be flat and not slippery
- The climb and descend of the platform always be done from the front
- Use suitable footwear providing safe support
- Never climb on the guardrails

9. WARRANTY

FORTAL guarantees its own manufactured products (excepting specific clauses accepted by the customer and FORTAL) for a period of 2 years from the delivery date (date given on the delivery slip) against all manufacturing defects, except for:

- Labour costs and travelling costs
- Wear and tear due to impacts, a lack of maintenance, choks, etc.
- Use in inappropriate conditions or conditions that do not comply with those defined herein or installations that do not comply with the user installation instructions.

Any other compensation is formally excluded from the warranty, including operating loss, damage incurred and any prejudice whatsoever subsequent to using our manufactured products. Any modification, repair or replacement of parts during the warranty period does not extend the period of cover.

Should our manufactured products be modified outside our production site without our prior written agreement, FORTAL's liability cannot be incurred.